


HARVEST COVER PLATES & HANDLES for CASE IH ROTARY COMBINES

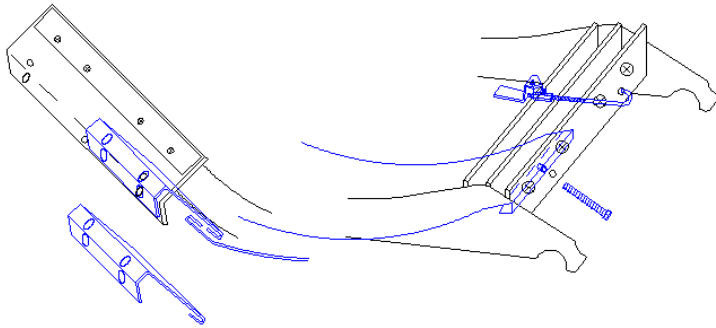

Use bottom holes for Cover Plate installation using either bolt or Cover Plate Handle

OLDER MODEL CASE IH CONCAVE
Requires holes "A" and "B" drilled





The HARVEST COVER PLATES fit over the bottom outside of the concave and hold the heads in place to allow for proper threshing, particularly in small grains. Depending on how difficult the crop is to thresh you'll add as many cover plates as are required to achieve proper threshing. Two HARVEST COVER PLATES, covering the first concave completely, are usually enough to achieve effective threshing in difficult to thresh crops. In hard to thresh conditions a third HARVEST COVER PLATE may be installed at the front of the second concave.

In addition to improving the threshing the HARVEST COVER PLATES prevent the rotor from driving all the material through the right side of the concave and overloading the right side of the shoe. You'll get a more uniform distribution of material across the entire width of the shoe supply augers.

HARVEST COVER PLATE HANDLE

The Harvest Cover Plate Handle allows for easy installation and removal of Cover Plate. The handle features an over centering lever action to lock the Cover Plate in place. To attach the handle to the cover plate drill a 1/4" hole as shown, then bolt handle onto cover plate.

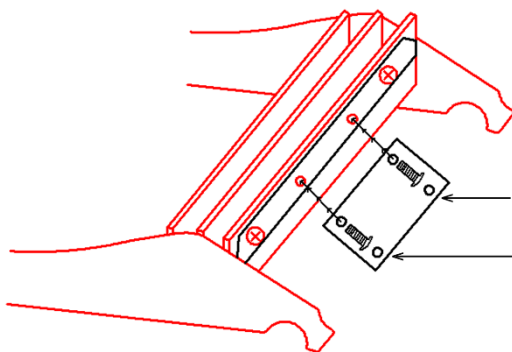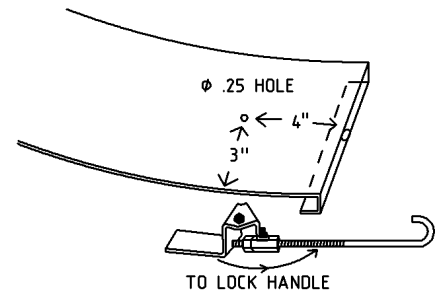

CASE IH 1PIECE CONCAVE

The Cover Plate Handle and the CP Retainer Plate **MUST** be used with the CASE IH 1 PC CONCAVE.

To attach the CP Retainer Plate, remove the two center bolts on the wire-retaining strap on the concave and then bolt on CP Retainer Plate.

J-Bolt must be hooked into the bottom of the CP Retainer Plate.



HARVEST SERVICES

A Division of MCKAY

Box 519 Old #11 Highway North, Craik, SK. S0G 0V0

Toll Free 1-800-667-2601 Telephone 1-306-734-2601

www.harvestservices.ca

sales@harvestservices.ca